



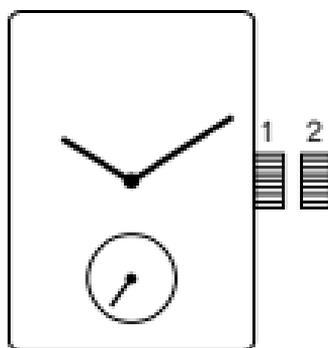

CHAPS

ENGLISH

ANALOG INSTRUCTIONS

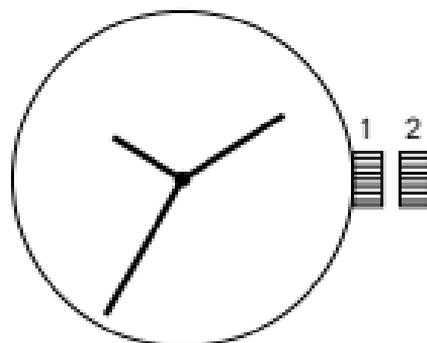

TIME SETTING


1. Pull crown out to position 2.
2. Turn crown to set hour and minute hands.
3. Return crown to position 1.

AUTOMATIC WINDING MOVEMENT

A timepiece fitted with an automatic winding movement obtains the power to wind itself by the movement of your wrist, there is no battery. Therefore, not wearing the timepiece for several consecutive days could exhaust the power reserve. If your watch stops, it is recommended that you manually wind the movement by rotating the crown clockwise to achieve the necessary power reserve.

It is important your timepiece is adjusted to match the size of your wrist. A loose fit may result in a loss in capacity of the timepiece to wind itself. When fully wound, your timepiece has a power reserve of approximately 36 hours.

MULTIFUNCTION 6P29

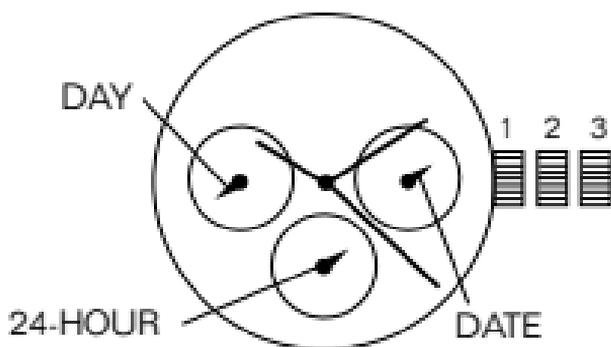

DATE SETTING

1. Pull crown out to position 2.
2. Turn clockwise to advance the date hand.
3. Push crown back to position 1.


DAY AND TIME SETTING

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands.
The hand showing days of the week will also move with the hour and minute hands. Keep turning until you have reached the desired day.

24-HOUR SUB-DIAL SETTING

The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

CHRONOGRAPH STOPWATCH JS10

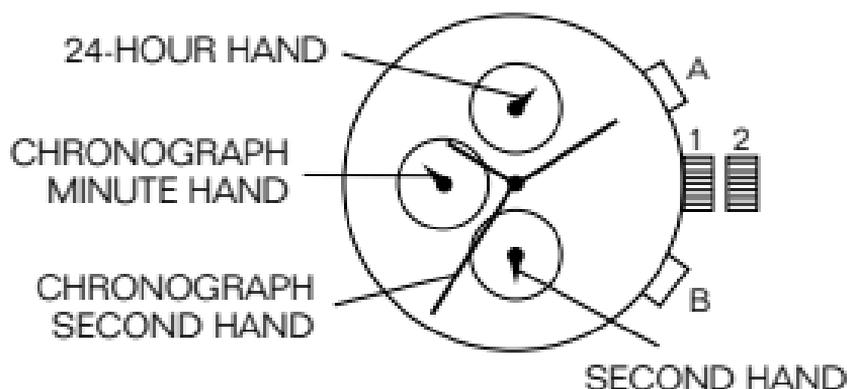

TIME SETTING

1. Pull crown out to position 2.
2. Turn crown to set desired time.
3. Return crown to position 1.

USING STOPWATCH

1. Press A to start/stop stopwatch and control split time.
2. Press B to reset stopwatch.


NOTE: This stopwatch is able to measure and display time in 1/10 second up to a maximum of 30 minutes. Stopwatch will stop automatically after running continuously for 30 minutes.

RESETTING STOPWATCH

1. Pull crown out to position 2.
2. Press A once to set chronograph second hand to zero position.
3. Once hands have returned to zero, reset to desired time.

4. Return crown to position 1.
NOTE: This procedure should only be performed when chronograph second hand does not return to zero position.

CHRONOGRAPH JS25

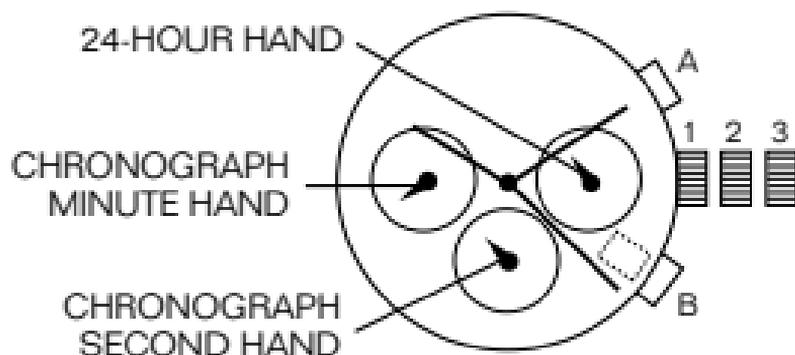

TIME AND DATE SETTING

1. Pull crown out to position 2.
2. Rotate crown clockwise until the previous day's date is shown in the date window.
3. Pull crown out to position 3.
4. Rotate crown clockwise until the correct date is shown in the date window.
5. Continue to rotate crown to set correct am/pm time.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

6. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

NOTE: Do not set the date between 9:00 PM and 1:00 AM to ensure accuracy.

CHRONOGRAPH


1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

CHRONOGRAPH ZERO RESET

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise. Each press of A or B will move the chronograph hands by one increment/decrement. Or press and hold A or B for fast increment/decrement.
3. When both hands are in the zero position, reset time and return crown to position 1.

NOTE: Chronograph minute hand will synchronize with chronograph second hand during chronograph zero reset.

CHRONOGRAPH STOPWATCH VD54 (WITH DATE - VD53)

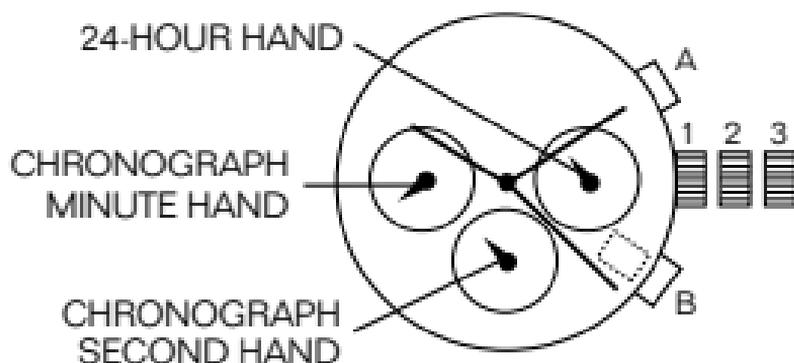

TIME AND DATE SETTING

1. Before setting the time, make sure the chronograph is stopped and set to zero (12:00) position.
2. Pull crown out to position 2.
3. Turn crown clockwise until the previous day's date is displayed.
4. Pull crown out to position 3 when the second hand is at the 12:00 position.
5. Turn crown to set time.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

6. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

CHRONOGRAPH

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.


SPLIT TIME

1. Press B while the chronograph is running.
2. Press B again to return to the chronograph.
3. Press A to finalize timing.
4. Press B to reset.

CHRONOGRAPH ZERO RESET

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise.
3. Return crown to position 1.

HOW TO CHANGE STRAPS

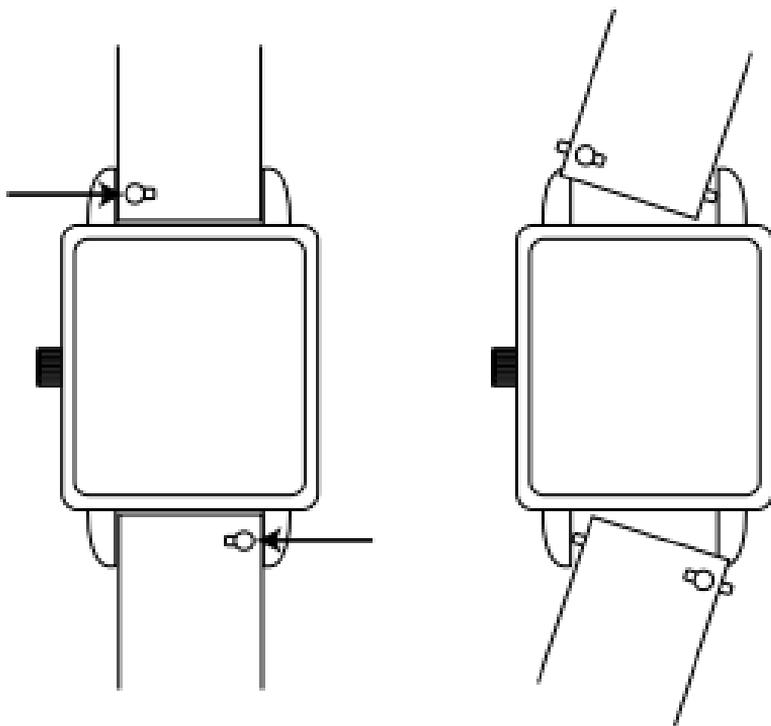

Push metal tab inward until the pin is released.
Repeat this process in reverse to re-insert the
new strap.

NOTE: The short side of the strap with the buckle
should be attached to the 12 o'clock hour. The
long side of the strap should be attached to the 6
o'clock hour.

WATER RESISTANCE		WATER-RELATED USE			
Caseback Marking	Depth				
—	—	X	X	X	X
WR	—	✓	X	X	X
3 ATM	3 Bar, 30 Meters	✓	X	X	X
5 ATM	5 Bar, 50 Meters	✓	✓	X	X
10 ATM	10 Bar, 100 Meters	✓	✓	✓	X
20 ATM	20 Bar, 200 Meters	✓	✓	✓	✓
30 ATM	30 Bar, 300 Meters	✓	✓	✓	✓
50 ATM	50 Bar, 500 Meters	✓	✓	✓	✓

Always set the crown in closed position (the normal position).
Tighten screw-lock crown completely.

