

ENGLISH

## 2-HAND, 3-HAND, 3-HAND DATE MODELS

Ronda 705, 763, 773, 775, 1032, 1062




### TIME AND DATE SETTING

1. Pull crown out to position 2 and turn clockwise or counter-clockwise (depending on the model) to set date to the previous day.
2. Pull crown out to position 3 and turn clockwise until the present date is displayed.
3. Continue turning crown to set the correct a.m./p.m. time.
4. Return crown to position 1.

# CHRONOGRAPH

Ronda 5030.D

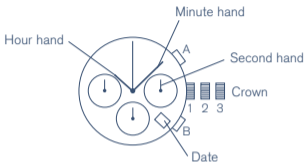


## SETTING THE TIME AND DATE

1. Pull crown out to position 2.
2. Turn crown clockwise to set date for previous day.
3. Pull crown out to position 3.
4. Turn crown clockwise until date changes to present day.
5. Continue to turn crown to set correct am/pm time.
6. Return crown to position 1.

Do not change the date between 10pm and 2am. This is when the movement is in position to carry out the automatic date change; any interference may cause damage to the movement.

## CHRONOGRAPH FUNCTIONS

- The chronograph counter at 6 o'clock measures hours.
- The chronograph minute counter at 10 o'clock measures 30 minute increments.
- The center stop-second measures 60 seconds per rotation.

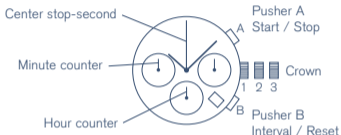

### Please Note:

Before using chronograph, please ensure that:

- Crown is in position 1.
- The three chronograph hands are precisely at zero (12:00) position after pressing B. Should this not be the case, the positions of the hands must be adjusted. Please refer to the section titled "Adjusting the Chronograph Hands to Zero Position."

### Basic Function (Start / Stop / Reset)

1. Press A to start/stop chronograph.
2. Press B to reset to zero.





## **Intermediate or Interval Timing**

1. Press A to start chronograph.
2. Press B while the chronograph is running to measure intervals (timing continues in the background).
3. Press B again to display ongoing measured time.
4. Repeat steps 1 and 2 to measure additional intervals.
5. Press A to finalize timing.
6. Press B to reset to zero.

## **Adjusting the Chronograph Hands to Zero Position**

If one or more chronograph hands are not in their correct zero (12:00) positions after pressing B (for example, following a battery change):

1. Pull crown out to position 3.
2. Press A and B simultaneously for 2 seconds until center stop-second hand rotates by 360°. Corrective mode is activated.
3. To adjust center stop-second hand, press A to move hand one increment; press and hold A for fast advance.
4. Press B to advance to hour counter hand. Press A to move hand one increment; press and hold A for fast advance.
5. Press B to advance minute counter hand. Press A to move hand one increment; press and hold A for fast advance.
6. Return crown to position 1.

WATER RESISTANCE		WATER-RELATED USE			
Caseback Marking	Depth				
		Washing Hands	Showering, Bathing	Swimming, Snorkeling	Scuba Diving
—	—	X	X	X	X
WR	—	✓	X	X	X
3 ATM	3 Bar, 30 Meters	✓	X	X	X
5 ATM	5 Bar, 50 Meters	✓	✓	X	X
10 ATM	10 Bar, 100 Meters	✓	✓	✓	X
20 ATM	20 Bar, 200 Meters	✓	✓	✓	✓
30 ATM	30 Bar, 300 Meters	✓	✓	✓	✓
50 ATM	50 Bar, 500 Meters	✓	✓	✓	✓
<p>Always set the crown in closed position (the normal position). Tighten screw-lock crown completely.</p>					